REMIS

EN

Instructions adjusting cord tension

REMIcare Van 2, REMIcare Van, REMIcare II / II+, REMIcare Urbanvan

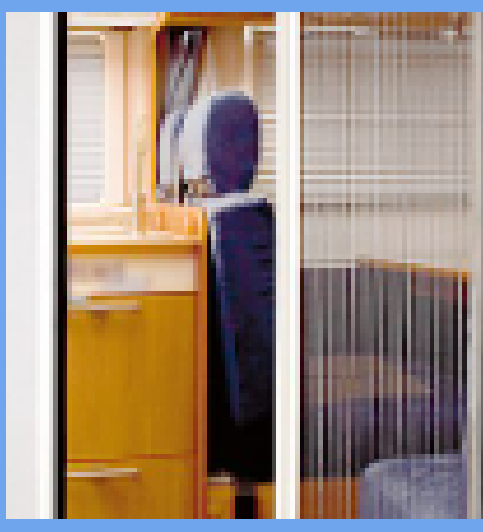

REMIS

EN

Content

A. REMIcare Van 2

B. REMIcare Van

C. REMIcare II & REMIcare II+

D. REMIcare Urbanvan

Adjusting the Cord Tension

To adjust the cord tension, use a 1.5 mm Allen key to loosen the set screw in the cord tensioner. The cord tensioner is located in the upper guide rail.

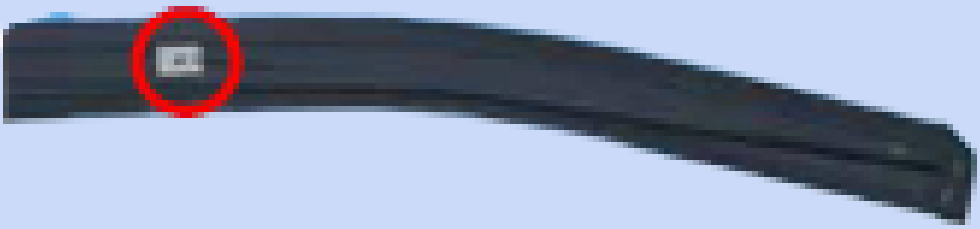

Now slide the cord tensioner towards the handle bar to increase the tension, or away from the handle bar to reduce the tension.
Once the desired tension is set, tighten the set screw again.

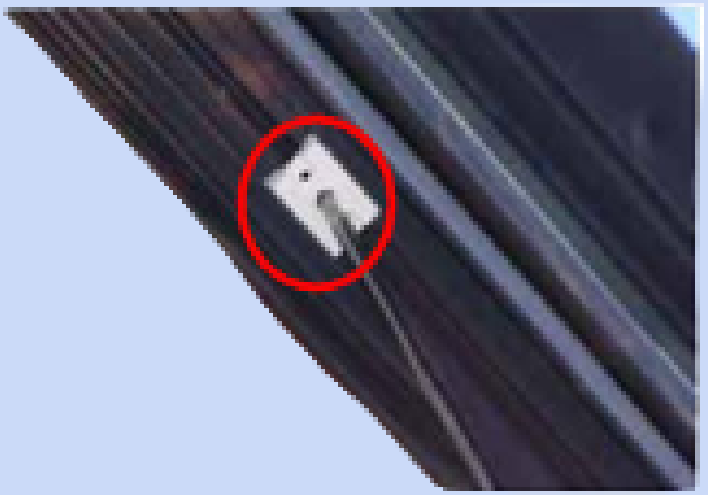

Do not tighten the cord too much. Over-tightening may cause the cord to break.
In this case, the product warranty will be void.

The cord clamp in the lower guide rail is located inside the end cap.

Use a 1.5 mm Allen key to loosen the set screw in the center of the cord tensioner.
Slide the cord tensioner towards the handle bar to increase the cord tension, or in the opposite direction to reduce the tension.
After adjusting the tension, tighten the set screw again.

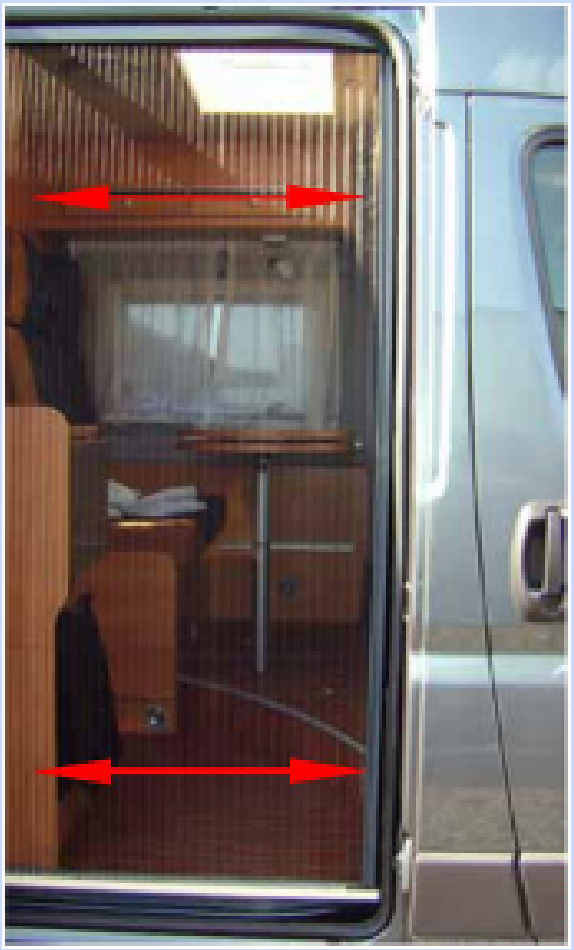

Make sure that the handle bar is parallel to the cassette profile or the door seal after adjusting the tension.

Note: When tightening or loosening the cord, the handle bar should be aligned in the direction shown below.

String strecher	Pulling	Loosening	Direction
Top	X		BR
Top		X	BL
Buttom	X		TR
Buttom		X	TL

Caution: Do not overtighten the pre-tension. This can make the product hard to operate and may cause the cords to break.

B.REMIcare Van

EN

Adjusting the Cord Tension

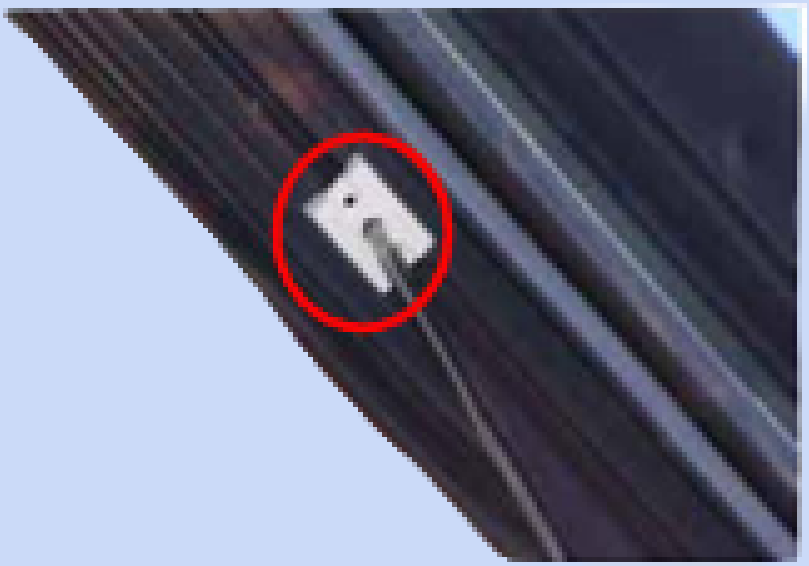

To adjust the cord tension, use a 1.5 mm Allen key to loosen the set screw in the cord tensioner located in the upper guide rail.
Slide the cord tensioner towards the handle bar to increase the tension, or in the opposite direction to reduce the tension.
Once the desired tension is set, tighten the set screw again.

EN

To locate the cord tensioner in the lower guide rail, carefully move your finger between the brushes of the bottom profile.
The cord tensioners are located in the lower area.

Use a 1.5 mm Allen key to loosen the set screw in the center of the cord tensioner.
Slide the cord tensioner towards the handle bar to increase the cord tension, or in the opposite direction to reduce the tension.
After adjusting the tension, tighten the set screw again.

Do not tighten the cord too much. Over-tightening may cause the cord to break.
In this case, the product warranty will be void.

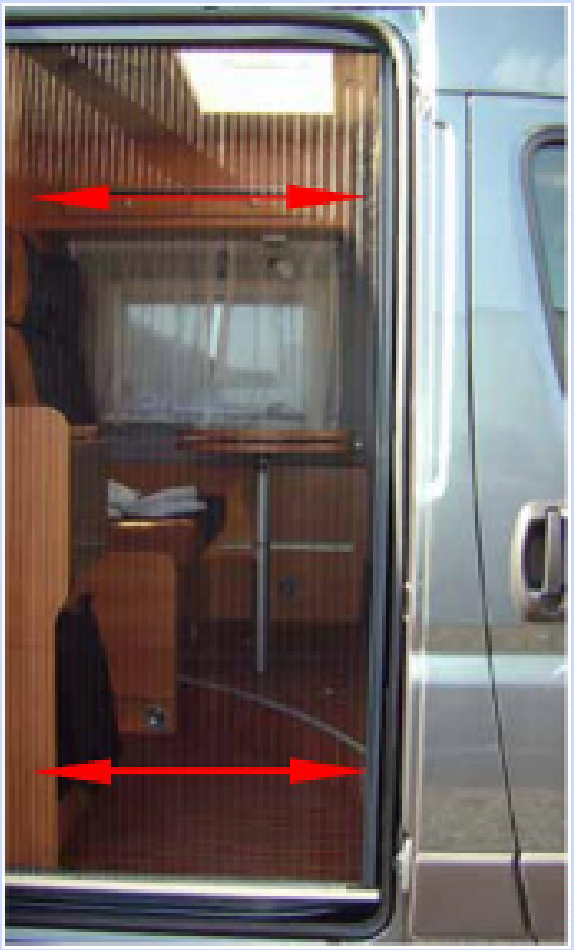

Make sure that the handle bar is parallel to the cassette profile or the door seal after adjusting the tension.

Note: When tightening or loosening the cord, the handle bar should be aligned in the direction shown below.

String strecher	Pulling	Loosening	Direction
Top	X		BR
Top		X	BL
Buttom	X		TR
Buttom		X	TL

Caution: Do not overtighten the pre-tension. This can make the product hard to operate and may cause the cords to break.

Adjusting the line tension

To tighten the string, loosen the threaded pin in the upper corner of the frame and tighten or loosen the string according to the table below.

The adjustment of the cord in the lower rail varies depending on the model. The lower image shows the REMICare2 version.

REMIcare 2

With the **REMIcare2+** model, you need to locate the position of the cord clamp. To do this, you can gently push the brush to one side and determine the position using an Allen key.

Ensure that the handle strip is parallel to the cassette profile or door seal after tensioning.

Note: When tightening or loosening, align the handle bar in the following direction

String strecher	Pulling	Loosening	Direction
Top	X		BR
Top		X	BL
Buttom	X		TR
Buttom		X	TL

CAUTION: The preload must not be set too tight, otherwise operation will be too difficult and, in the worst case, the cords may break.

D.REMIcare Urbanvan

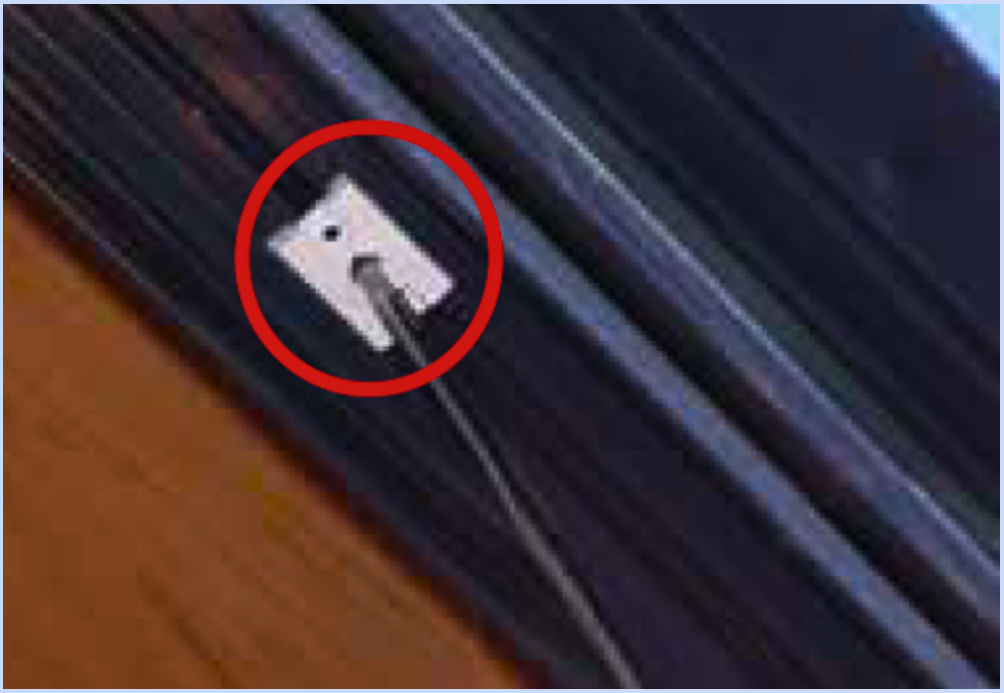

To adjust the cord tension, attach the cord tensioner to the upper guide profile. Loosen the threaded pin with a 1.5 mm Allen key. For tighter cord tension, pull the cord tensioner towards the handle bar and tighten the threaded pin again. For looser cord tension, pull the threaded pin in the opposite direction.

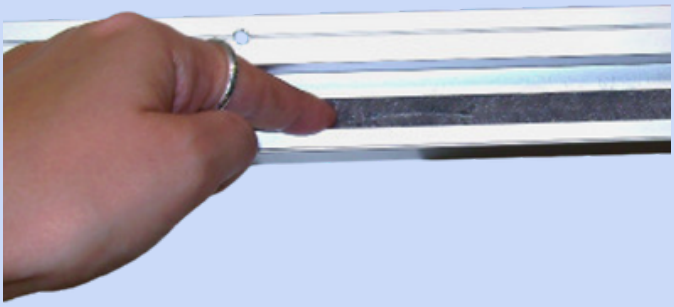

Determine the position of the cord tensioner in the bottom profile. Carefully run your finger along the bottom profile between the brushes and feel for the cord tensioner. To tighten or loosen the cord tension, follow the procedure described in the previous step.

CAUTION: Do not tighten the cord too much, as this may impair usability or even cause the cord to break. In this case, the warranty will be void.

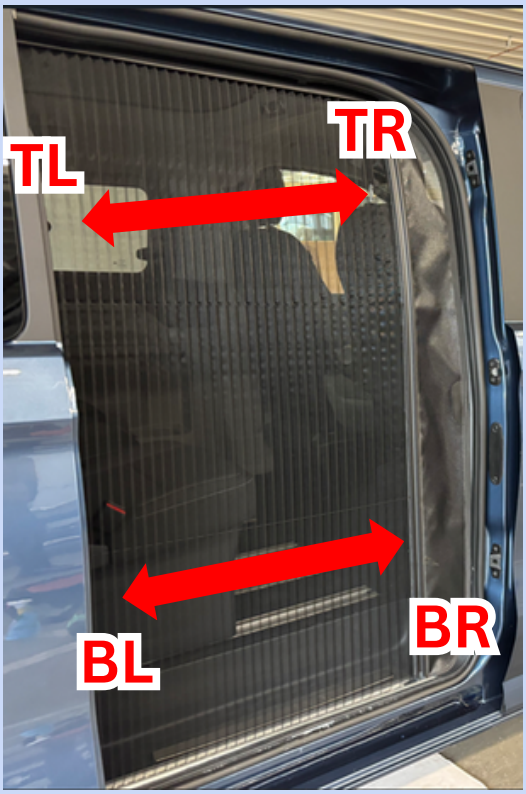

Ensure that the handle strip is parallel to the cassette profile or door seal after tensioning.
Note: When tensioning or loosening, align the handle strip in the following direction:

String strecher	Pulling	Loosening	Direction
Top	X		BR
Top		X	BL
Buttom	X		TR
Buttom		X	TL

CAUTION: The preload must not be set too tight, as this will restrict operability and may cause the cord to break. In this case, the warranty will be void.